Powering off the Smile-T10-HV System




- 1. Long press the power button for 6 seconds on the left side of battery pack, then switch off the battery breaker on the right side of battery pack.
- 2. Switch off the battery breaker which is at the bottom middle inverter.
- 3. Switch off the PV switch at the bottom left of the inverter.
- 4. Switch off the PV switch between the PV string and the inverter if there is any.
- 5. Switch off the AC breaker between the inverter and the load.
- 6. Switch off the AC breaker between the inverter and the grid

Powering on the Smile-T10-HV System




- 1. Ensure that the all breakers connecting to or on the product are OFF.
- 2. Check the grid-connected state of the product
 - Short press the power button on the left side of battery pack, then switch on the battery breaker on the right side of battery pack.
 - Switch on the battery breaker which is located at the bottom middle inverter.
 - Switch on the PV switch which is located at the bottom left inverter.
 - Switch on the external AC breaker between the grid and the inverter.
 - Set the operating parameters through the APP.
 - Wait about 3 minutes for the inverter to enter the grid-connected state, and observe the
 - indicators states on the display panel of the inverter. At this time, the following 4 EDs ("SYSTEM", "BATTERY", "METER", "COM") on the display panel is always on

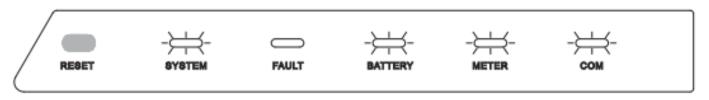

Powering on the Smile-T10-HV System (Cont.)



- 3. Check the UPS state of the product
 - Switch off the external AC breaker between the grid and the inverter.
 - The inverter will enter the UPS state at once, and observe the indicators states on the display panel of the inverter. At this time, the following 3 LEDs ("SYSTEM", "BATTERY", "COM") on the display panel is always on.

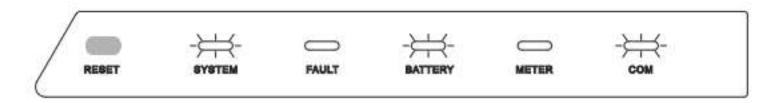

- Check the wiring of the backup load
- Switch on the external AC breaker between the load and the inverter.
- Please connect a lowpower electrical appliance to the socket of backup load. If the electrical appliance can work normally, it means that the wiring of the backup has been
- installed successfully.